



C Series VFD

Quick Start Guide

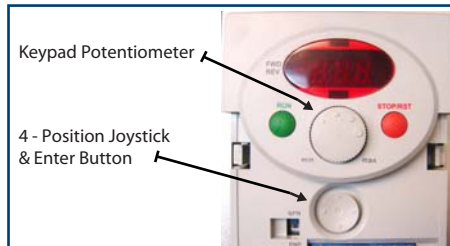

Keypad Potentiometer
4 - Position Joystick & Enter Button

Using the LCD keypad display

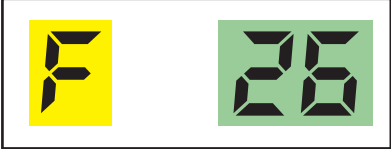

PARAMETER "GROUP" "CODE"

Move the Joystick ◀(Left), & ▶(Right) to scroll through the five parameter groups: DRV ► F ► H ► I ► DRV
Move the Joystick ▲(Up), & ▼(Down) to scroll through parameter codes within each parameter group.
Once you have found a parameter you would like to change, click the Joystick in once, make your change by moving the joystick ◀(Left), ▶(Right), ▲(Up), & ▼(Down), & click the Joystick in twice to enter the new setting.

Parameter	Description	Fan & Pump - Recommended Settings
DRV-00	Frequency Command / Reference (Parameter that first appears when VFD is powered up)	Local Speed Control: Set target speed in Hz (*PID see below)
DRV	Drive Start / Stop Control Method (Looks like DRU on display)	Local Control: 0 (Keypad) Remote Control: 1
FRQ	Frequency Setting Method (Looks like FR9 on display)	Local: 1 (KeyPad-2) or Remote: 3 (0-10V) or 4 (4-20mA) 2 (Keypad Potentiometer) PID Control: 0 (KeyPad-1)
F-1	Forward / Reverse Run Disable	Reverse Run Disable: 2
F-24	High / Low Frequency Limit Enable	If Needed: 1 (Do not use for PID control)
F-26	Minimum Frequency Limit. (Only visible if FU1-33 = Yes)	Set desired low limit in Hz (Do not use for PID control)
F-39	Output Voltage Adjustment (If motor rated voltage is less than input voltage, set this parameter accordingly. For example, if Input Voltage is 480VAC & Motor Voltage is 460VAC, set parameter to 96%)	100% = Output voltage will be the same as input voltage when drive is running at full speed
F-50	Electronic Motor Thermal Overload Protection	1 (Yes)
F-59	Stall Prevention (for high starting torque motors set FU1-71 to 105-110%)	111*
H-19	Output Phase Loss Protection	1
H-20	Power on Start (VFD will start if remote start contact is closed at drive power-up)	1 (Yes)
H-21	VFD will Restart After a Fault was Reset	1 (Yes)
H-22	Speed Search (VFD will start on the fly if motor is still spinning)	1110*
H-26	Number of Auto Restart Attempts	3
H-27	Restart Delay (Set as maximum as possible for your application)	60.0sec.
H-30	Motor Size: kW=HP x 0.75	Kilowatt rating of motor
H-31	Number of Motor Poles: # of Poles=7200 ÷ max RPM of motor	Number of motor poles
H-33	Motor Full Load Current = Full Load Amps x Service Factor	Motor Full Load Current

Additional Parameters for Proportional Integral Derivative (PID) Control in Single Motor Applications

(Typically used when VFD needs to maintain a desired pressure or temperature based on direct sensor feedback to VFD)

*DRV-00	PID Set Point (FRQ must be set to 0 (Keypad-1) or 1 (Keypad-2))	Set Point=(Desired press or temp) x 60Hz ÷ (Max Range of sensor)
H-40	Select 2 for Using Internal PID Control with Analog Sensor	2
H-50	Feedback for PID control: select 0 for 4-20mA or 1 for 0-10V	0 for 4-20mA feedback or 1 for 0-10V feedback
H-51	Proportional Gain for PID Control Response	Higher percentage = greater speed change at same feedback value
H-52	Integral Time for PID Control Response	Higher number = longer response time at same feedback value

NOTE: For reversed PID control (VFD should increase speed when feedback value is higher than desired set-point) change I-8 or I-13 to 60.00Hz and I-10 or I-15 to 0.00Hz. To calculate a set-point = 60Hz÷((Desired press or temp) x 60Hz ÷ (Max Range of sensor)).

Reset Parameters

H-93	If Needed, Use this Parameter to Reset all Settings to Default	Reset all Settings: 1 (Will return to 0 when done)
------	--	--

* For Binary Bit parameters the bit must be in the top position to equal On (1) and the bottom position to equal Off (0) and are numbered from right to left. (Example; H-22: 1110 = $\begin{matrix} 1 & 1 & 1 & 0 \\ | & | & | & | \\ \text{Bit 3} & \text{Bit 2} & \text{Bit 1} & \text{Bit 0} \end{matrix}$)

** When entering parameters any changes made will only be stored if the Joystick is pressed in twice after making the change.


↩ See reverse for generic and optional wiring diagrams. ↩

Call 800-962-3787 or visit cerusind.com


3101 SW 153rd Drive, Beaverton, OR 97006

C-Series Wiring Schematics


TWO-WIRE SENSOR 4-20mA WITH VFD DC POWER

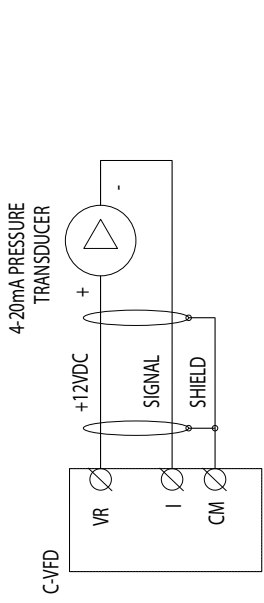

TWO-WIRE SENSOR 4-20mA WITH EXTERNAL DC POWER

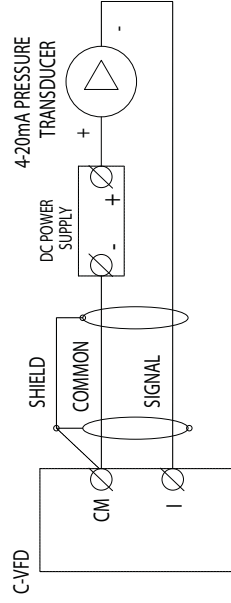

THREE-WIRE SENSOR 0-10V WITH VFD DC POWER

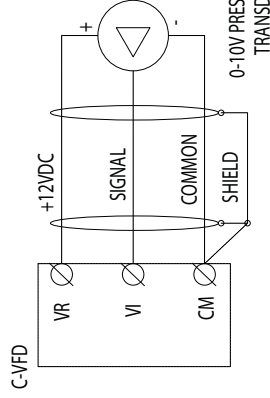

THREE-WIRE SENSOR 0-10V WITH EXTERNAL DC POWER

